



- 4. * DIMENSION NOT INCLUDING CABLES
- 3. MUST BE DIRECTLY CONNECTED TO CONTROLLER BEFORE LOOPING TO DISPLAY UNIT
- 2. SEE PRODUCT INSTALLATION MANUAL FOR SENSOR OPTIONS, SETUP AND CONTROL
- 1. SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE

NOTES: UNLESS OTHERWISE SPECIFIED.

THIS DRAWING CONTAINS INFORMATION PROPRIETARY TO PLANAR SYSTEMS, INC. ANY REPRODUCTION IN PART OR WHOLE WITHOUT THE WRITTEN PERMISSION OF PLANAR SYSTEMS IS PROHIBITED. THIS DRAWING IS SUPPLIED FOR INFORMATION, IDENTIFICATION, ENGINEERING, EVALUATION, AND/OR INSPECTION PURPOSES ONLY AND MAY NOT BE USED AS BASIS FOR THE MANUFACTURING OF PRODUCTS OR THE DESIGN OF ANY THIRD PARTY PRODUCT UNLESS AUTHORIZED IN WRITING BY PLANAR SYSTEMS.

PRODUCT **SENSOR HUB, IM9-1G/5G**
 PART NO. **933-1723-00**

SHEET TITLE **PRODUCT OVERVIEW**
 UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN MILLIMETERS (INCHES):

DRAWN BY **EJS**
 DRAWN DATE **02 MAY 23**
 SHEET **1 OF 1**
 SHEET SIZE **B** REVISION **A**